 


*Sunbeam*

# Toastermatic toaster

THE FINEST FULLY AUTOMATIC TOASTER MADE

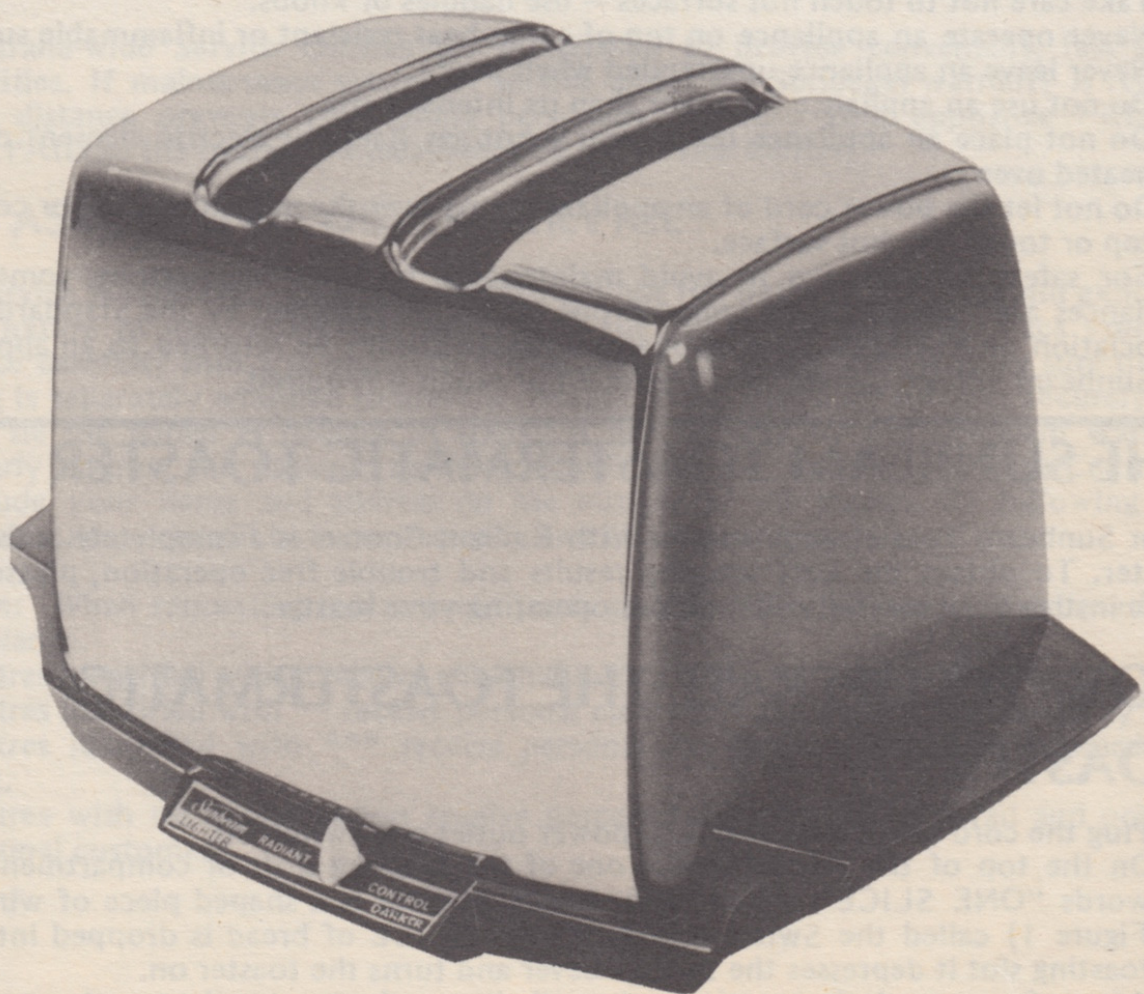

INSTRUCTION BOOK

## SUNBEAM RECOMMENDS SAFETY FIRST

We congratulate you on your purchase of a new Sunbeam Product and wish to stress that Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercises a degree of care when using any electrical appliance.

Following, we have listed those precautions we feel are to be regarded as essential for the safe use of an electrical appliance:

- \* Read carefully and save all the instructions provided with an appliance.
- \* Always turn the power off at the power outlet before you remove the plug. Remove by grasping the plug - do not pull on the cord.
- \* Turn the power off and remove the plug when an appliance is not in use and before cleaning.
- \* Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner; if damage is suspected, return the appliance to the nearest Sunbeam Appliance Service Centre for examination repair or adjustment.
- \* Do not use your appliance with an extension cord unless this cord has been checked and tested by your electricity supplier or qualified technician.
- \* Close supervision is necessary when your appliance is being used by, or near children. Do not leave hot appliances or appliances with moving parts near where children may touch them.
- \* Do not immerse appliance in water.
- \* Take care not to touch hot surfaces — use handles or knobs.
- \* Never operate an appliance on top of a non-heat resistant or inflammable surface.
- \* Never leave an appliance unattended when in use.
- \* Do not use an appliance for other than its intended use.
- \* Do not place an appliance on or near a hot gas flame or electric element or in a heated oven.
- \* Do not let the power cord of an appliance hang over the edge of a table or counter top or touch any hot surface.
- \* For safety reasons and to avoid maintenance by unskilled persons, some appliances are "sealed" using tamperproof means, as specified by the Standards Association of Australia. Such appliances should always be returned to an approved Sunbeam Service Centre for adjustment or repair if required.

## THE SUNBEAM TOASTERMATIC TOASTER

Your Sunbeam Toastermatic toaster with Radiant Control is a completely automatic toaster. To obtain the best toasting results and trouble free operation, please read these instructions carefully first before operating your toaster.

## HOW TO OPERATE THE TOASTERMATIC TOASTER

1. Plug the cord into a 240 volt A.C. power outlet and switch on.
2. On the top of the toaster beside one of the toasting slots or compartments the words "ONE SLICE" are marked. Inside the slot is a shaped piece of wire (see Figure 1) called the Switch Lever. When a SLICE of bread is dropped into this toasting slot it depresses the Switch Lever and turns the toaster on.
3. After a few seconds the toasting rack gently lowers the toast to the toasting position.
4. Toasting continues until the bread is toasted to the shade selected by the Radiant Shade Lever.

5. Power cuts off automatically and after a few seconds the bread gently rises without noise until a large portion of the toasted slice is raised above the the toasting slot. The toast can then be easily plucked out of the slot. The Switch Lever rises and resets automatically.

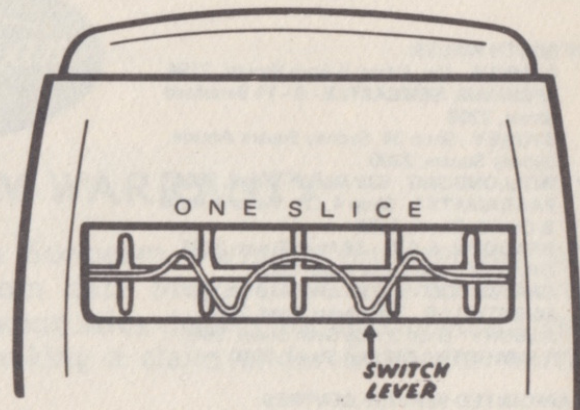 


FIG. 1

## ABOUT THE BREAD YOU USE

Sunbeam Toastermatic Toaster is designed to toast bread to many different shades, suiting most tastes. Two slices of bread from the same loaf will cook to perfection. Different bread types or textures react differently. Slices from different loaves will not necessarily toast to the same shade. Some small end pieces of Vienna -- type bread may be too small to operate the Switch Lever and toast successfully.

## SELECTING THE DESIRED SHADE OF TOAST

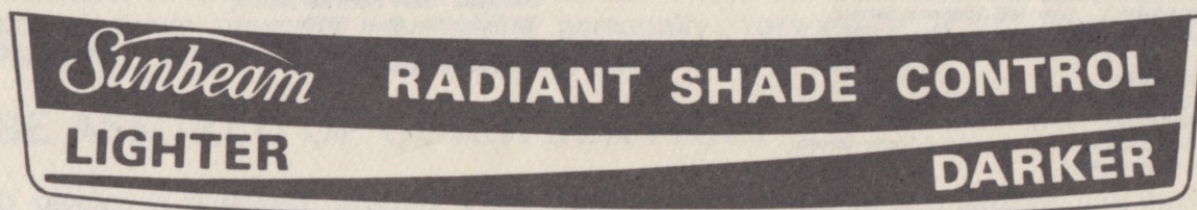 


FIG. 2

The Sunbeam Toastermatic Toaster is designed to give you a complete cooking range for toasting bread. When first using your Toastermatic Toaster we recommend that you select a position on the Radiant Shade Control between lighter and darker (Figure 2). Toast a slice of bread. If the toast is too light for your taste slide the Control Lever towards Darker. Remove the toast, then drop it into the slot marked "ONE SLICE" and re-cook.

If necessary reset the Radiant Shade Control to obtain the desired shade of toast.

If you seek a lighter shade of toast, slide the Radiant Shade Control towards Lighter and test with a fresh slice of bread. You may adjust the Radiant Shade Control while cooking is in progress.

Usually your toaster does not require attention to the Radiant Shade Control every-time you use it. However, if you change from one bread type to another, alteration may be necessary to the Radiant Shade Control.

For example, from white breads to close textured rye or wheatmeal bread a Darker setting may be needed. Breads with a higher sugar content, such as raisin loaf need a lighter setting because they toast faster.

### IMPORTANT

ALWAYS USE THE HANDLES ON THE PLASTIC BASE WHEN LIFTING TOASTER. DO NOT PLACE FINGERS OR ANY OTHER INSTRUMENTS, SUCH AS A KNIFE OR SPOON INTO THE TOASTING SLOTS.

## TOASTING HINTS

1. When you are toasting one slice always place this in the slot marked "ONE SLICE" to turn on the toaster.
2. For bread slices of uneven height or width always place the LARGER slice in the slot marked "ONE SLICE". Make sure the bread is centred in the slot. Otherwise heat from the centre element will operate the cut out mechanism before the bread has toasted to the desired shade.
3. Bread cut to different thickness may be toasted at the same time but they will vary in shade. Always place the THINNER slice in the slot marked "ONE SLICE".
4. If the bread slice does not lower, check the power point is switched "ON", that the 3-pin plug is correctly and firmly fitted to the power point. Then simply lift the slice from the slot marked "ONE SLICE" and drop it again into the Switch Lever. DO NOT PRESS OR FORCE THE CARRIAGE DOWN.
5. Should you at any time find it necessary to interrupt the toasting cycle, simply switch of the power at the power point. Toast will rise automatically. Once the power is turned on further slices of bread can be dropped in immediately for toasting.
6. To re-heat toast, lift the toast from the slot marked "ONE SLICE" drop it into the Switch Lever and the toast will re-heat without over toasting.  
NOTE: NEVER RE-HEAT BUTTERED TOAST
7. When you have finished toasting always turn the power off at the power point and remove the 3-pin plug from the power socket.

## CARE AND CLEANING

The hinge crumb tray at the base of the toaster allows you to clean the toaster in moments.

1. IMPORTANT, ALWAYS TURN THE POWER OFF AND REMOVE THE 3-PIN PLUG FROM THE POWER SOCKET BEFORE STARTING TO CLEAN.
2. NEVER TIP THE TOASTER UPSIDE DOWN, OTHERWISE CRUMBS MAY BECOME CAUGHT IN THE TOASTER MECHANISM. INSTEAD, HOLD THE TOASTER UPRIGHT (FIGURE 3) AND SPRING OPEN THE HINGED CRUMB TRAY.
3. Shake well to remove crumbs.
4. Wipe over the outside surfaces of the toaster with a soft, dry cloth. If the Toaster is grease marked use a slightly dampened cloth.

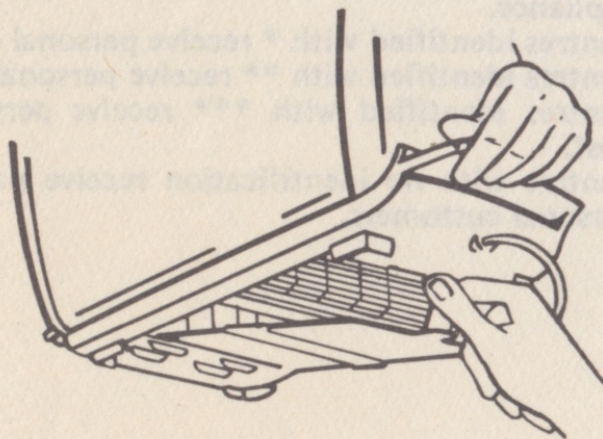 


FIG. 3

Pin your receipt  
here



## YOUR SUNBEAM WARRANTY

Your Sunbeam appliance is covered by a Sunbeam warranty for a period of 12 MONTHS (3 months commercial use) from date of purchase against defects in workmanship and material. Kindly retain your sales docket for this product as this proof of purchase must be presented if making a claim under Sunbeam warranty terms.

This warranty naturally does not cover misuse or negligent handling or if not used in accordance with instructions. This warranty excludes breakables such as glass or ceramic items. SUNBEAM'S WARRANTY IS ADDITIONAL TO THE CONDITIONS AND WARRANTIES WHICH ARE MANDATORY AS IMPLIED BY THE TRADE PRACTICES ACT 1974 AND STATE AND TERRITORY LEGISLATION.

IF SERVICE IS REQUIRED IT SHOULD BE RETURNED TO AN APPROVED SUNBEAM SERVICE CENTRE.

### SUNBEAM APPLIANCE SERVICE CENTRES:

Australia-wide Service Centres are established to provide convenient, fast service facilities. If maintenance service or service under the Sunbeam warranty is required and distance prevents you calling personally, forward your appliance FREIGHT PREPAID to the nearest Sunbeam Appliance Service Centre.

### BE ASSURED OF QUICK SERVICE:

If service is required, prepare a tag stating your full name and address and explaining the nature of your complaint and attach the tag to the appliance. Pack your appliance carefully into a strong carton with plenty of newspaper, making sure that the plug is separately wrapped to prevent damage to the appliance surface. Securely wrap and tie the parcel as damage in transit is not covered by the Sunbeam Warranty. Clearly address the package to the selected Sunbeam Appliance Service Centre and include your name and address on the outside of the carton. By following these simple rules, you will be sure of speedy and efficient service.

Note: When requesting replacement parts always quote the model number of your appliance.

Centres identified with \* receive personal over the counter customers only.

Centres identified with \*\* receive personal customers and parcels forwarded by rail.

Centres identified with \*\*\* receive personal customers and parcels forwarded by post.

Centres with no identification receive parcels forwarded by both rail and post and personal customers.

# SUNBEAM APPLIANCE SERVICE COMPANY

## NEW SOUTH WALES:

- \* CAMPSIE - Cnr Alfred & Harp Streets, 2194
- WICKHAM, NEWCASTLE - 9 - 11 Beresford Street, 2293
- \* SYDNEY - Shop 34, Sydney Square Arcade, Sydney Square, 2000
- \*\*\* WOLLONGONG - 63B Market Street, 2500
- \* PARRAMATTA - Shop 4, Cnr Victoria Road & Church Street, 2150
- \*\*\* BRADDON, A.C.T. - 34 Mort Street, 2601
- ORANGE - 185 Lords Place, 2800
- \* CHATSWOOD - 450 Victoria Avenue, 2067
- HURSTVILLE - 368 Forest Road, 2220
- ALBURY - Shop 3, 465 Dean Street, 2640
- TAMWORTH - 249 Peel Street, 2340

## OR APPOINTED SERVICE CENTRES:

- BROKEN HILL - Electronics (B.H.) Pty. Ltd., Blende Street, 2880
- PENRITH - The Appliance Clinic, Riley Street, 2750.

## VICTORIA:

- MARIBYRNONG - Sloane Street, 3032
- \* MELBOURNE - 373 Little Bourke Street, 3000
- GEE LONG - 88 Ryrie Street, 3220
- \* BURWOOD - 1415 Toorack Road, 3125
- MORWELL - 24 George Street, 3840
- BALLARAT - 725 Sturt Street, 3350
- \* BOX HILL - 943-945 Whitehorse Road, 3128
- \* PRESTON - Shop 8, 505 High Street, 3072
- DANDENONG - Shop 7, 56/72 Walker Street, 3175

## OR APPOINTED SERVICE CENTRES:

- BENDIGO - Beale Repairs, 66 Mitchell Street, 3550
- MILDURA - A.G. & H.A. Hartlett, 96A Eighth Street, 3500
- SWAN HILL - Swan Hill Appliance Service, Drummond House, Beveridge Street, 3585

## QUEENSLAND:

- YERONGA - Hyde Road, 4104
- \* BRISBANE - 103 Albert Street, 4000
- TOWNSVILLE - Cnr Yeatman & Somer Streets, Hyde Park, 4812

TOOWOOMBA - 211 Margaret Street, 4350

ROCKHAMPTON - 18 East Street, 4700

\*\*\* SOUTHPORT - 4-6 Windmill Street, 4215

## OR APPOINTED SERVICE CENTRES:

- BUNDABERG - Digger Theile, 37 Perry Street, 4670
- CAIRNS - Northern Electrical Services, 65 McLeod Street, 4870
- MACKAY - Appliance Spares and Repairs, 34 Gregory Street, 4740

## SOUTH AUSTRALIA:

- NORTH PLYMPTON - 39-45 Deeds Road, 5037
- \* ADELAIDE - 18 Peel Street, 5000

## OR APPOINTED SERVICE CENTRES:

- MT. GAMBIER - John Sheard Radio & T.V. Electrical, 31 Crouch Street South, 5290
- WHYALLA - H. & M. Appliances, 34-44 Patterson Street, 5600

## TASMANIA:

- HOBART - 25 Tasma Street, 7000
- LAUNCESTON - 188 York Street, 7250

## WESTERN AUSTRALIA:

- OSBORNE PARK - 359 Scarborough Beach Road, 6017
- \* PERTH - 867 Hay Street, 6000

## OR APPOINTED SERVICE CENTRES:

- BUNBURY - Bunbury Appliance Services, 13 Bourke Street, 6230
- ALBANY - Moyses Electrical Services, 7 Minna Street, 6330

## NORTHERN TERRITORY:

- DARWIN - Duke Electrical Service, 3B Fannie Bay Place, 5790
- ALICE SPRINGS - Murray Neck, Todd Street, 5750



**SUNBEAM CORPORATION LIMITED**

(INCORPORATED IN N.S.W.)

SYDNEY MELBOURNE ADELAIDE BRISBANE PERTH HOBART

Trade Mark *Sunbeam* Registered  
Copyright

83

Pub. No. TA34563A